

Drop test


Description

A drop test is an essential part of testing for earmuffs and earplugs. This equipment provides the steel plate and drop height for testing headband mounted earmuffs to EN 352 Part 1 and earplugs to EN 352 Part 2.

The equipment is fitted with adjustable feet in order to level the plate, the mild steel plate, 500 x 500 x 12 mm, is edged and chamfered, and flash ground top and bottom before being zinc plated.

Services required

Floor mounted

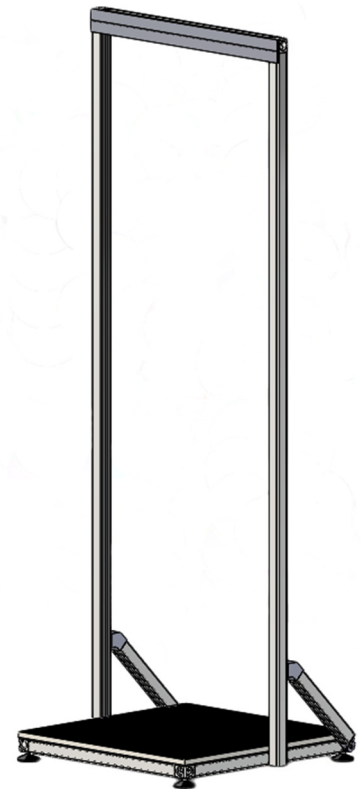

Approximate size & weight

70 x 70 x 160cm : 7 kg

Relevant standards

EN 352 parts one and two

EN 13819-1:2002, clauses 4.6.2, 4.7.2, 5.4.2 and 5.5.2.2